




# **CCIMS**

*Close Coupled Instrument  
Mounting System*

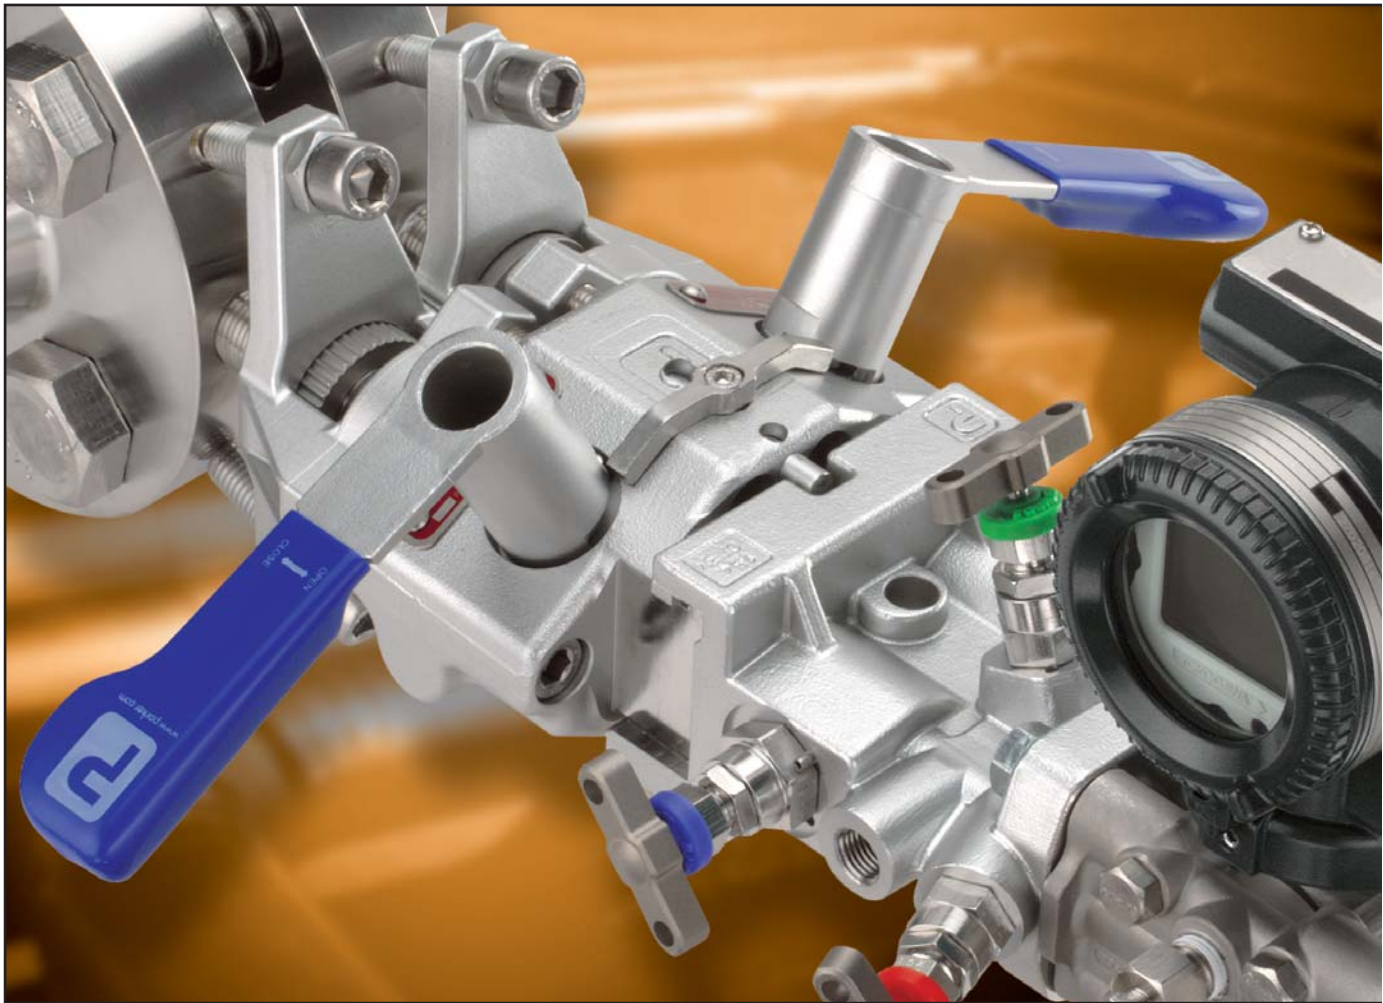









*Catalogue 4190-CCIMS  
May 2006*



## Introduction

Parker Hannifin's response to the constant demand for higher performance in flow measurement is the introduction of a breakthrough in process control: CCIMS – Close Coupled Instrument Mounting System; A radical and standardised solution for direct-mounting differential pressure transmitters to piping flanges.

## Contents

|                   |                                       |   |
|-------------------|---------------------------------------|---|
| <b>Page 3</b>     | CCIMS : The Concept                   |    |
| <b>Page 4/5</b>   | CCIMS : The Benefits                  |    |
| <b>Page 6/7</b>   | Design and Test References            |    |
| <b>Page 8</b>     | Solution Configurations               |    |
| <b>Page 9</b>     | Primary (Isolation) Module Options    |  |
| <b>Page 10-12</b> | Secondary (Instrument) Module Options |  |
| <b>Page 13</b>    | Auxiliary Modules & Options           |  |
| <b>Page 14/15</b> | How to Order                          |  |
| <b>Page 16/17</b> | Valve Design & Performance Properties |  |
| <b>Page 18/19</b> | Basic Installation Guide              |  |

## CCIMS : The Concept

CCIMS supports the direct or 'close coupled' connection of one of the most common types of process instruments – differential pressure (DP) transmitters – to process pipework.

CCIMS combines an instrument manifold and a pipe interface (including isolation valves) and provides a standard means of connecting instruments with huge cost, performance and safety advantages.

### Design

CCIMS has been designed using tried and tested standard components from our current ball, needle and rising plug valve ranges. All the designs meet the relevant industry standard design codes.




### Manufacturing

A state of the art manufacturing cell has been established within our UK manufacturing facility to support CCIMS.



### Testing

CCIMS meets all relevant industry test requirements. All components and complete assemblies meet a 4:1 pressure test requirement and have been rigorously tested.

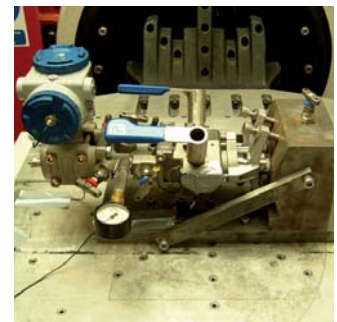

#### **WARNING**

FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries or its authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

#### **Offer of Sale**

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered into by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

## CCIMS : The Benefits

### Installation

The use of CCIMS will bring significant cost savings to plant operators and installers.

Instrument 'Hook-ups' can vary widely but they typically necessitate an assembly time of at least 12 hours (other estimates put this time to nearer 29 hours).

Mounting a CCIMS solution takes only half an hour, saving at least 75% of the installation time.

### Safety

A traditional 'hook-up' for flow measurement can involve up to 40 connections, each of which is a potential leak path.

A CCIMS solution reduces this to just 5 – a massive leap in integrity that helps to avoid the human and environmental safety issues caused by leakages or emissions.

Potential leak paths can be reduced by 75%.

### Maintenance

With the elimination of impulse lines, when using CCIMS, removes the potential problem of lines blocking, plugging or freezing.


Should the instrument need to be removed for calibration, maintenance or replacement this is able to be done literally in seconds because of the unique 'PhastFit' interlocked connection interface, which also significantly reduces the plant downtime.

### System Accuracy

Users now require high levels of reliability and integrity and the performance advantages are a major attraction.

With traditional impulse line arrangements, the length of the flow path, the volume of the system, the bends, elbows, tees and valves etc. can all introduce pressure drops and turbulence/flow variations (hydrostatic errors) that lead to measurement inaccuracies, or 'gauge line error', which can give inaccuracies of up to 15%.


The straight through flow path of CCIMS removes these problems.

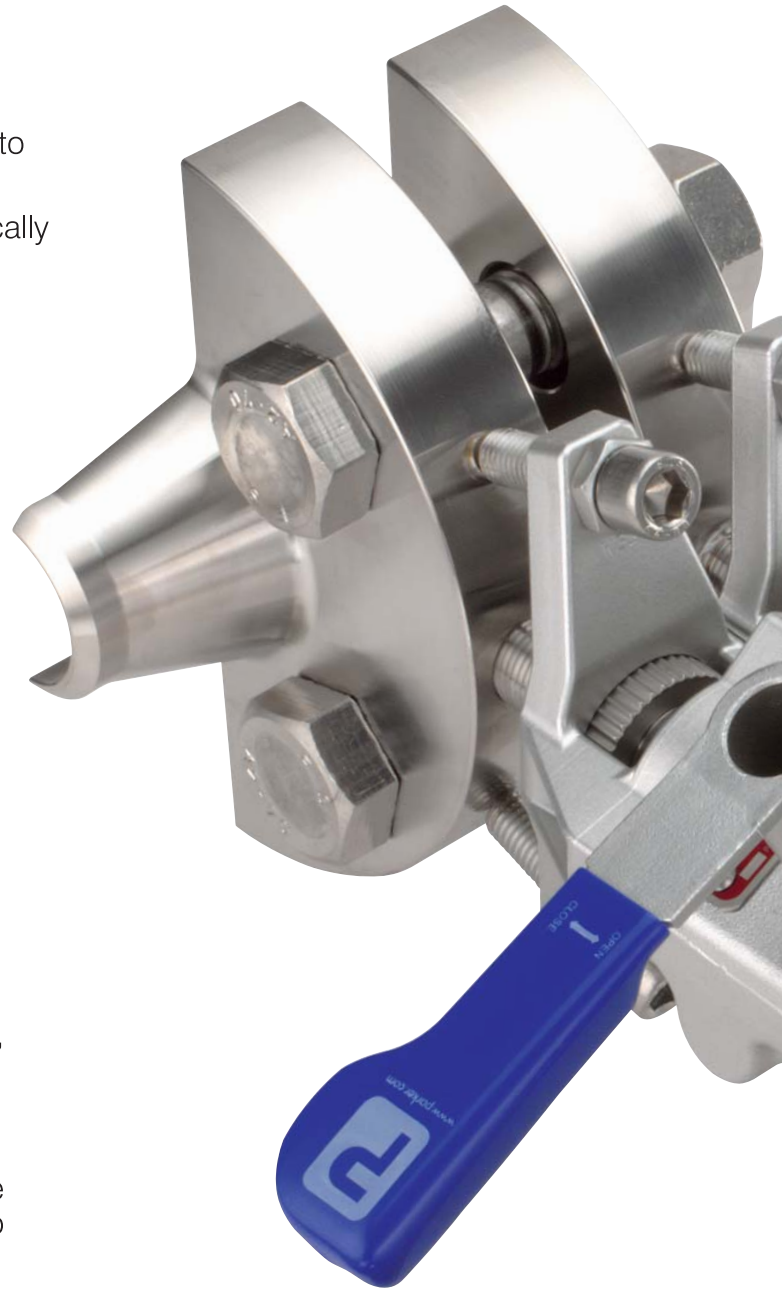

## Cost of Ownership

CCIMS benefits plant operators by reducing maintenance requirements and by enhancing the integrity and performance of the instrument system.

The 5 fold decrease in instrument changeover time, the easy specification, the reduced number of purchase orders needed, the reduced spares inventory and the reduced emissions monitoring costs all contribute to the significant reduction in the total cost of ownership.

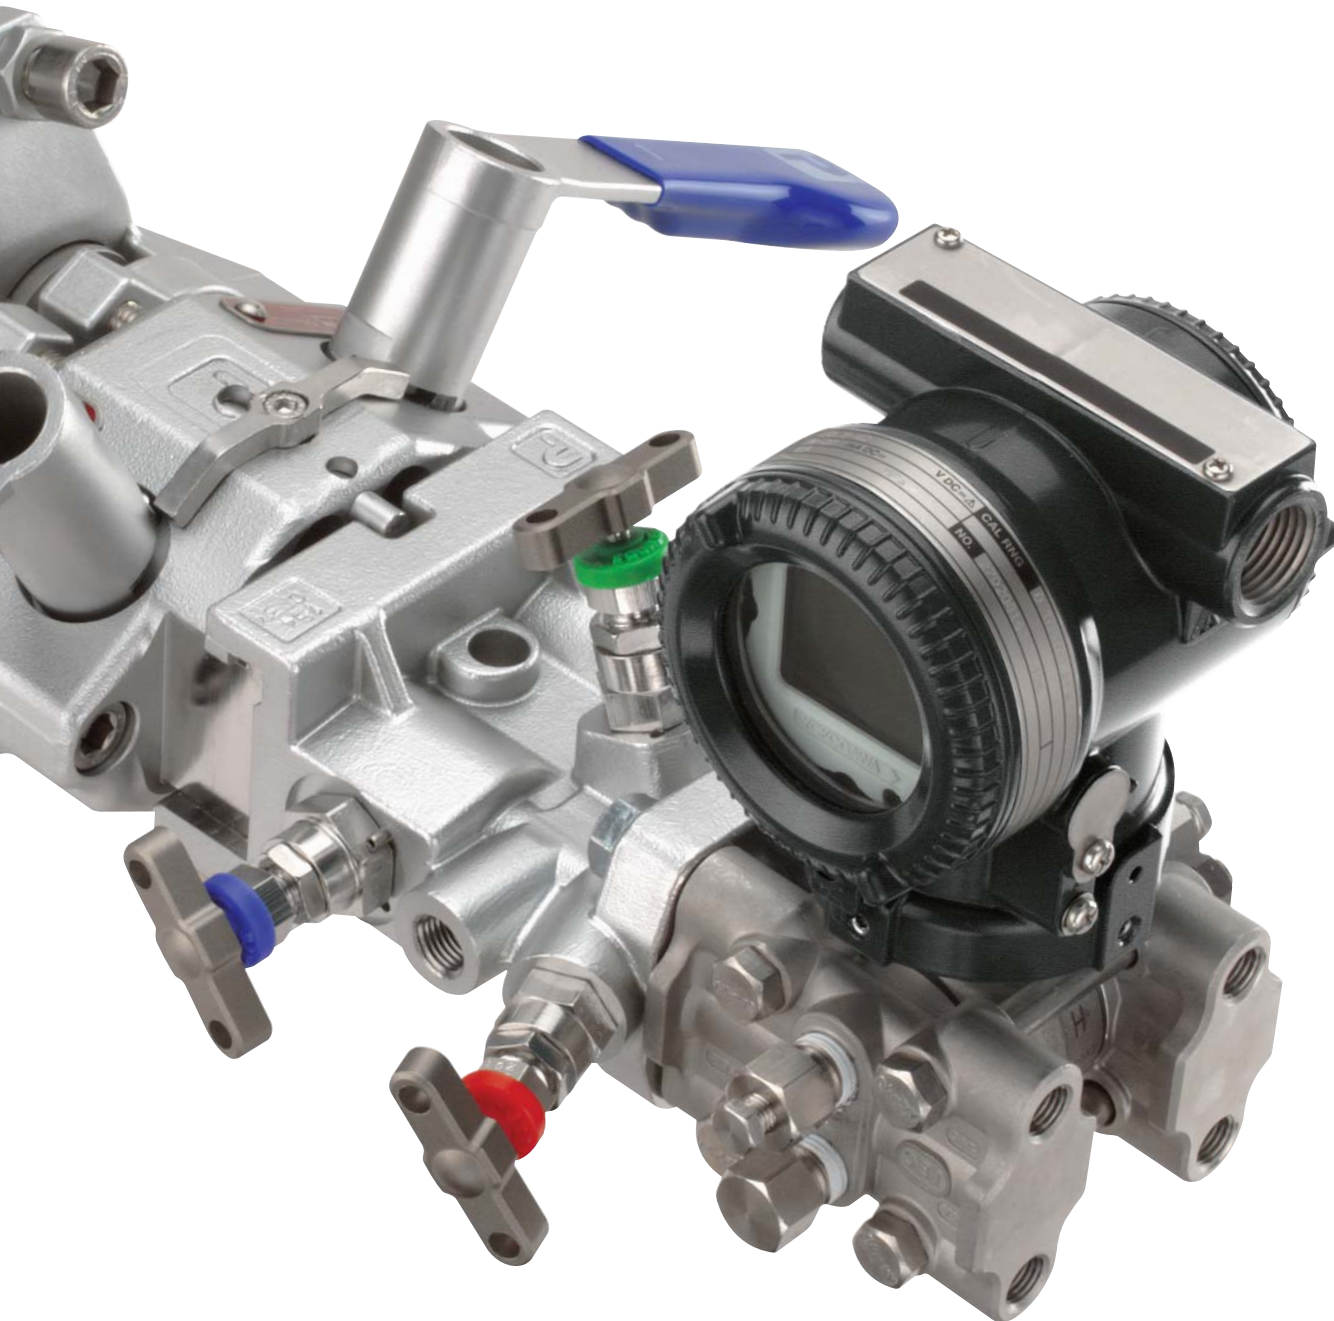

## Cost of Ownership

CCIMS benefits plant operators by reducing maintenance requirements and by enhancing the integrity and performance of the instrument system.

The 5 fold decrease in instrument changeover time, the easy specification, the reduced number of purchase orders needed, the reduced spares inventory and the reduced emissions monitoring costs all contribute to the significant reduction in the total cost of ownership.



## Value Proposition

### Reduced Installation Costs

- CCIMS offers end users and contractors significant opportunity to reduce installations costs.
- Installation time can be reduced from a typical hook up requiring at least 12 hours, to less than 1 hour.
- The number of components required for a hook up is significantly reduced – no need for tubing, fittings, brackets, instrument stands.
- The procurement costs of dealing with multiple vendors are eliminated.

### Reduced Cost of Ownership

- CCIMS delivers significant reductions in cost of ownership.
- Instrument change out time is minutes rather than hours reducing labour time and costs.
- Quick change out reduces any associated process downtime.
- By reducing the number of components, and being more compact than traditional hook ups. Emissions monitoring costs are reduced.
- By being closer to the process and by utilising direct flow paths gauge line errors are reduced.

### Increased Safety

- CCIMS provides end users with a safer alternative to traditional hook up practice.
- Potential leak path and connections are reduced from more than 30 to 5.
- The unique mounting system to the orifice carrier removes any load from the process tapings removing the possibility of vibration induced fatigue failure.
- The interlocked isolation device ensures that the isolation valves cannot be opened accidentally.

**Please consult your local Parker Sales Engineer or Distributor for a free evaluation of your current hook up practice together with the quantified savings that CCIMS can deliver for you.**

## Design & Test Data

### 1. Vibration

CCIMS has been tested in accordance with the standards used by the leading transmitter manufacturers for vibration requirements. CCIMS units have been subjected to a 50 hour swept sine endurance test in three axes whilst pressurised to 3,000psi (207bar). The test being carried out at an independent UKAS accredited testing facility.

### 2. Salt Spray

All components and assemblies have been subjected to a corrosive environment test in accordance with ASTM B11703 for a period of 100 hours.

### 3. Piping & Pressure Codes

CCIMS has been designed to, and is in accordance with the following codes:

- ASME VIII Div 1 (Design/Factor of Safety)
- ANSI/ASME B16.34 (Design/Material)
- ANSI/ASME B1.20.1 (NPT Threads)
- BS 3643 pt2 (Metric Threads)
- ANSI/ASME B16.36 (Orifice Flange connection)
- API 607/BS 6755 pt2 (Fire safety)
- IEC 61518 (Instrument connection)
- MSS-SP-25 (Product Marking)
- MSS-SP-99 (Instrument Valves)
- ASME B36.10 (MSW Pipe)

### 4. Environmental Testing

CCIMS units can be used with operating temperatures from -20°C up to 232°C depending upon the seat material used.



Extensive thermal cycling has been conducted on the complete unit. The unit is pressurised to the maximum operating pressure for the relevant seat material, placed into a climatic chamber and thermally cycled through the full temperature range, with the pressure monitored to ensure there is no thermal fatigue failure.

### 5. Finite Element Analysis (FEA)

Finite Element Analysis has been used throughout the design and development process to arrive at the final design, helping to ensure adequate safety levels while minimising weight and size.


### PED/CE Marking

In accordance with Article 3 paragraph 3, of the Pressure Equipment Directive 97/23/EC, valves having a nominal size of DN25 (1") or less are manufactured in accordance with "Sound Engineering Practice" and it is not permitted to CE mark items which fall into this category.

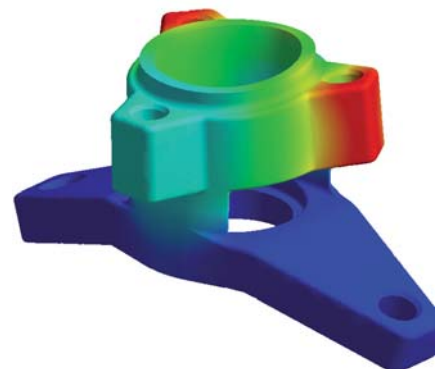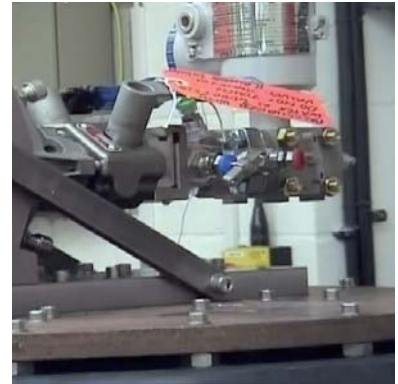



## Solution Configurations

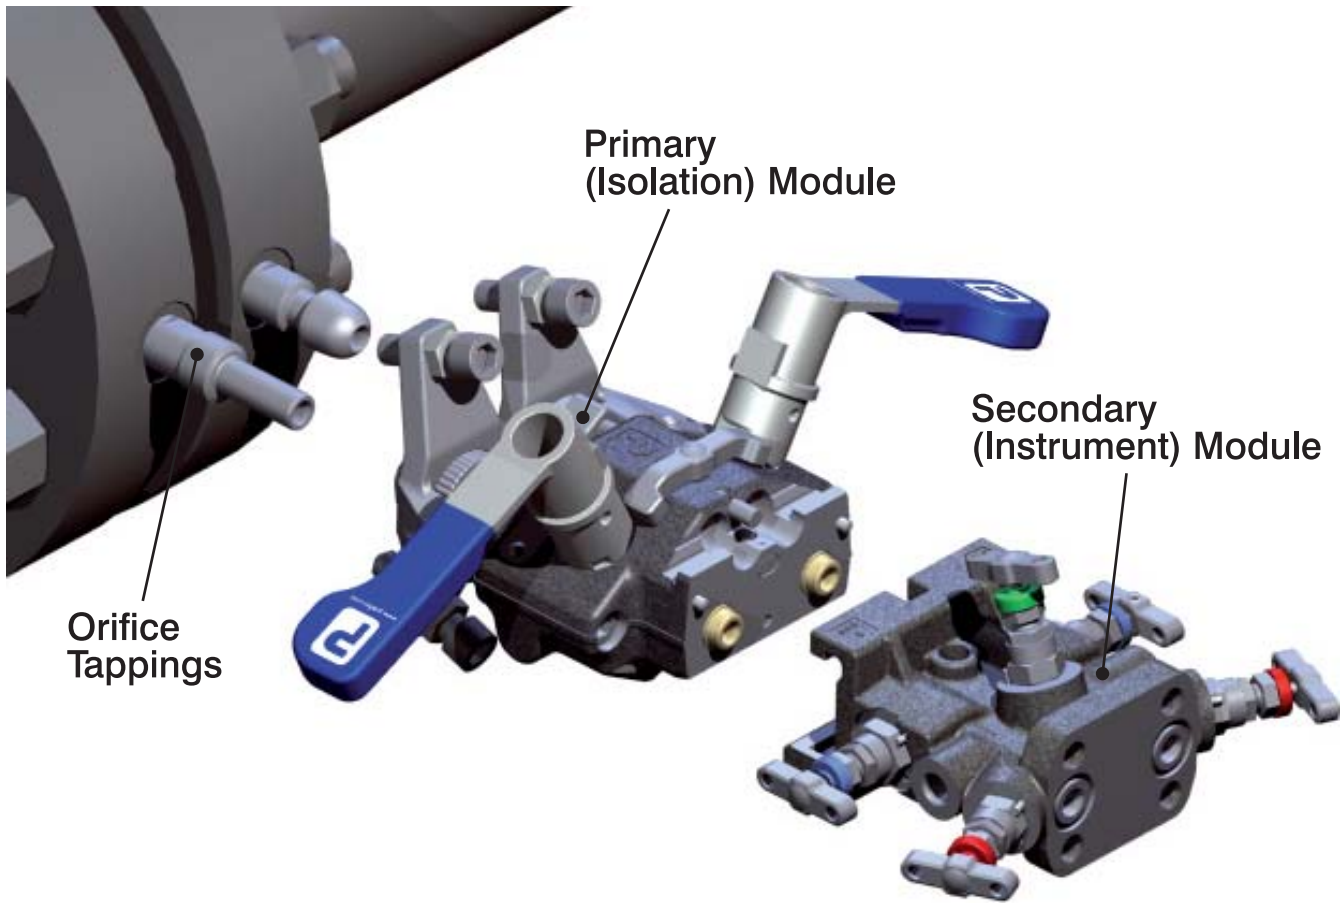

### Orifice Tappings



1/2 -14 NPT (Male)

Part No.

A



3/4 - 14 NPT (Male)

Part No.

B



1/2 N.B. Male Socket Weld

Part No.

C



3/4 N.B. Male Socket weld


Part No.

D

## Primary (Isolation) Module Options

### Single Block


10mm Through Bore • Primary Isolate - Ball Pattern

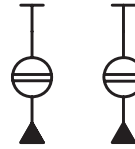

|          |
|----------|
| Part No. |
| P1       |

### Single Block & Bleed


10mm Through Bore • Primary Isolate - Ball Pattern, Bleed Valve - Needle Pattern

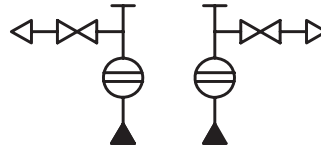

|          |
|----------|
| Part No. |
| P2       |

### Double Block


10mm Through Bore • Primary Isolate - Ball Pattern • Secondary Isolate - Ball Pattern

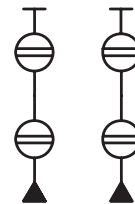

|          |
|----------|
| Part No. |
| P3       |

### Double Block & Bleed

10mm Through Bore • Primary Isolate - Ball Pattern  
Secondary Isolate - Ball Pattern, Bleed Valve - Needle Pattern

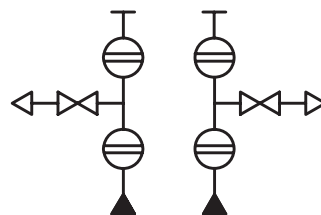



|          |
|----------|
| Part No. |
| P4       |

Ball Valve details - p16; Needle Valve details - p17.

## Secondary (Instrument) Module Options : 3 Valve

### 3 Valve with Rising Plug Valve (RPV) Isolate



Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 6mm straight through flow path.

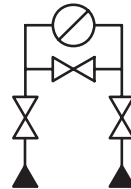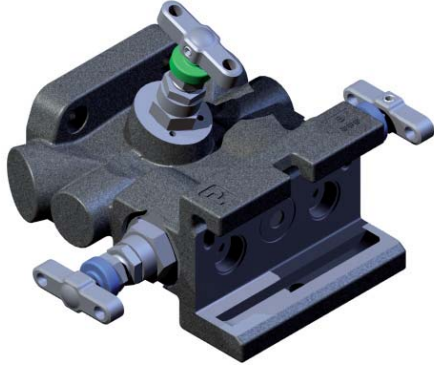

|          |
|----------|
| Part No. |
| S3R      |

### 3 Valve with Ball Valve Isolate



Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 10mm straight through flow path.

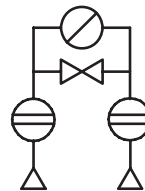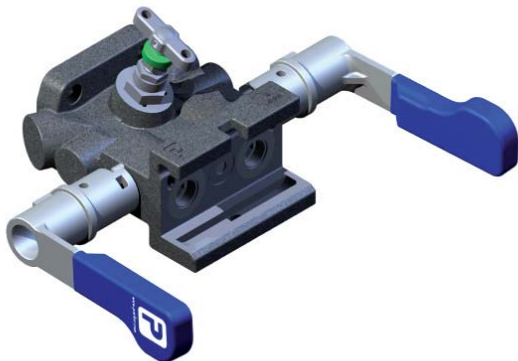

|          |
|----------|
| Part No. |
| S3B      |

### 3 Valve with Needle Valve Isolate

Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 6mm globe style flow path.

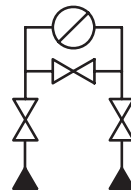
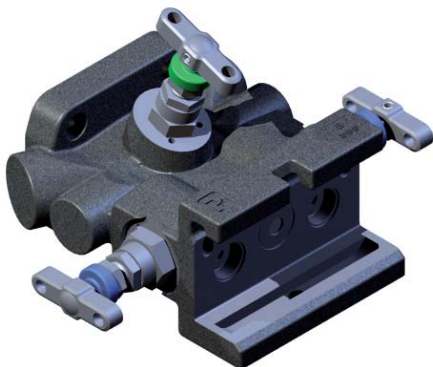


|          |
|----------|
| Part No. |
| S3N      |

## Secondary (Instrument) Module Options : 5 Valve

### 5 Valve with Rising Plug Valve (RPV) Isolate



Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres. Designed in accordance with IEC 61518 type B (without spigot). 6mm straight through flow path.

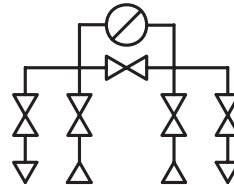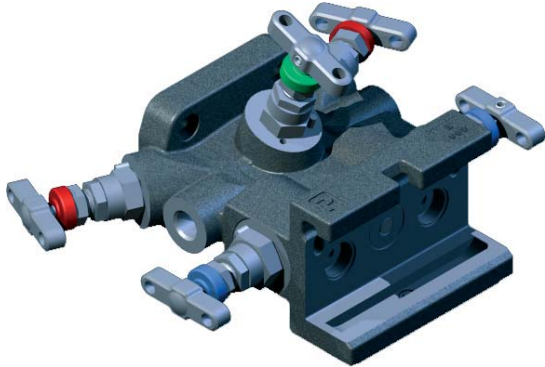

|          |
|----------|
| Part No. |
| S5R      |

### 5 Valve with Ball Valve Isolate



Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres. Designed in accordance with IEC 61518 type B (without spigot). 10mm straight through flow path.

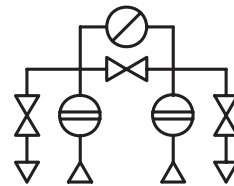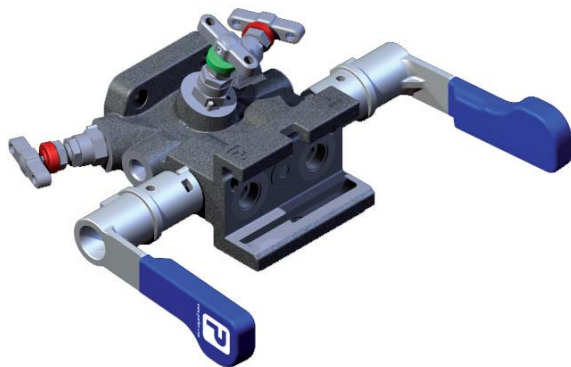

|          |
|----------|
| Part No. |
| S5B      |

### 5 Valve with Needle Valve Isolate

Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres. Designed in accordance with IEC 61518 type B (without spigot). 6mm globe style flow path.

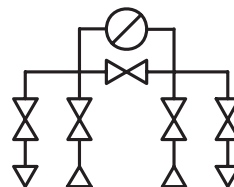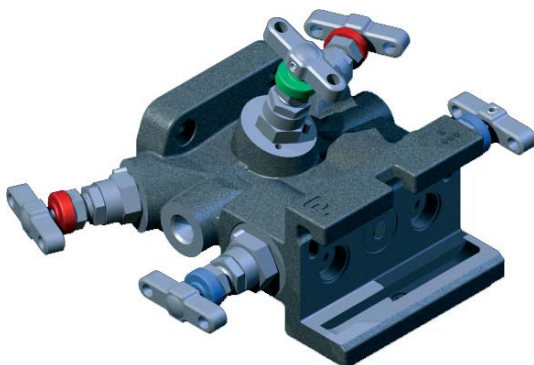



|          |
|----------|
| Part No. |
| S5N      |

Needle and Rising Plug Valve details - p17.

## Secondary (Instrument) Module Options: Custody Transfer / Fiscal Metering Module

### Custody Transfer / Fiscal Metering with Rising Plug Valve (RPV) Isolate

Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 6mm straight through flow path.

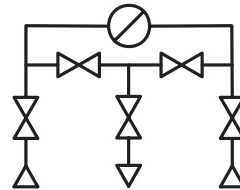
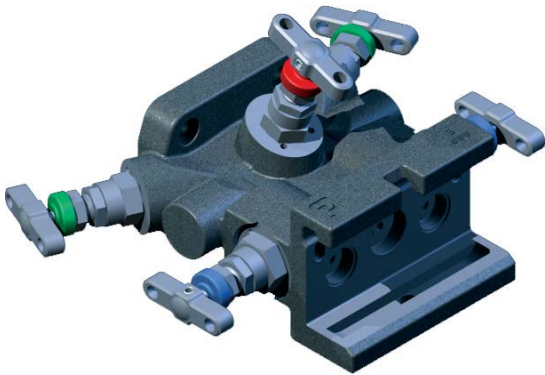


|          |
|----------|
| Part No. |
| S5R*     |

\* insert 3 or 4 for instrument type

### Custody Transfer / Fiscal Metering with Ball Valve Isolate

Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 10mm straight through flow path.

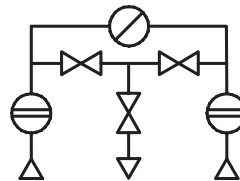
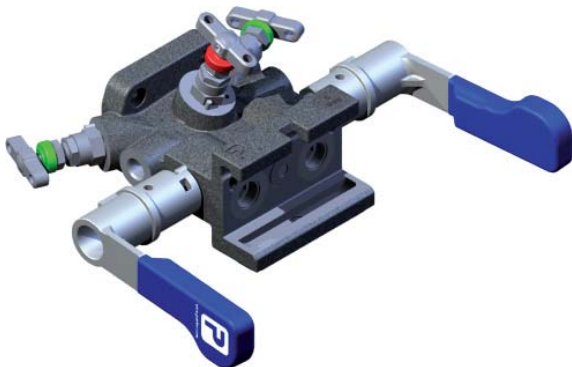


|          |
|----------|
| Part No. |
| S5B*     |

\* insert 3 or 4 for instrument type

### Custody Transfer / Fiscal Metering with Needle Valve Isolate

Direct mounting to differential pressure transmitters with 54mm/2.125" mounting centres.  
Designed in accordance with IEC 61518 type B (without spigot). 6mm globe style flow path.

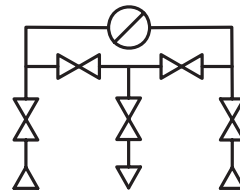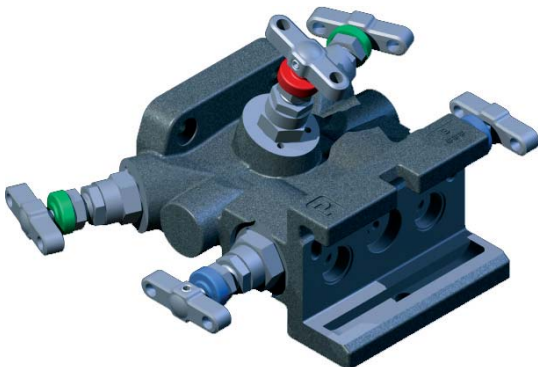

|          |
|----------|
| Part No. |
| S5N*     |

\* insert 3 or 4 for instrument type

## Auxiliary Modules & Options

### Secondary Blanking Plate Module

Provides fully sealed protection when instrument module is removed.



|          |
|----------|
| Part No. |
| AB       |

### Secondary 1/2 (Female) NPT Port Connection Module

Allows use in remote mounting applications.



|          |
|----------|
| Part No. |
| AR       |






### 90 Degree Twist Module

Used in vertical mounting installations. Supplied with additional bearing support.




|          |
|----------|
| Part No. |
| AV       |

## Valve Options
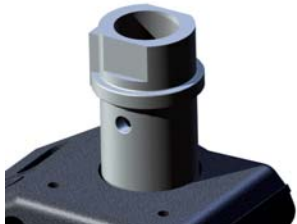
| Lockable Primary Isolates   | Anti Tamper Valves | Lockable Handwheel |   |          |    |  |          |     |
|---|--------------------|--------------------|---|----------|----|--|----------|-----|
|  <p>5mm diameter padlock. Padlock not supplied.</p> <table border="1"> <tr><td>Part No.</td></tr> <tr><td>L</td></tr> </table> | Part No.           | L                  |  <table border="1"> <tr><td>Part No.</td></tr> <tr><td>A</td></tr> </table>                        | Part No. | A  |  <table border="1"> <tr><td>Part No.</td></tr> <tr><td>LHW</td></tr> </table> | Part No. | LHW |
| Part No.  |                    |                    |   |          |    |  |          |     |
| L   |                    |                    |   |          |    |  |          |     |
| Part No.  |                    |                    |   |          |    |  |          |     |
| A   |                    |                    |   |          |    |  |          |     |
| Part No.  |                    |                    |   |          |    |  |          |     |
| LHW   |                    |                    |   |          |    |  |          |     |
| Handwheel   | Spanner Actuator   |                    |   |          |    |  |          |     |
|  <table border="1"> <tr><td>Part No.</td></tr> <tr><td>HW</td></tr> </table>   | Part No.           | HW                 |  <p>25.4mm / 1" AF</p> <table border="1"> <tr><td>Part No.</td></tr> <tr><td>SA</td></tr> </table> | Part No. | SA |  |          |     |
| Part No.  |                    |                    |   |          |    |  |          |     |
| HW  |                    |                    |   |          |    |  |          |     |
| Part No.  |                    |                    |   |          |    |  |          |     |
| SA  |                    |                    |   |          |    |  |          |     |

# How to Order

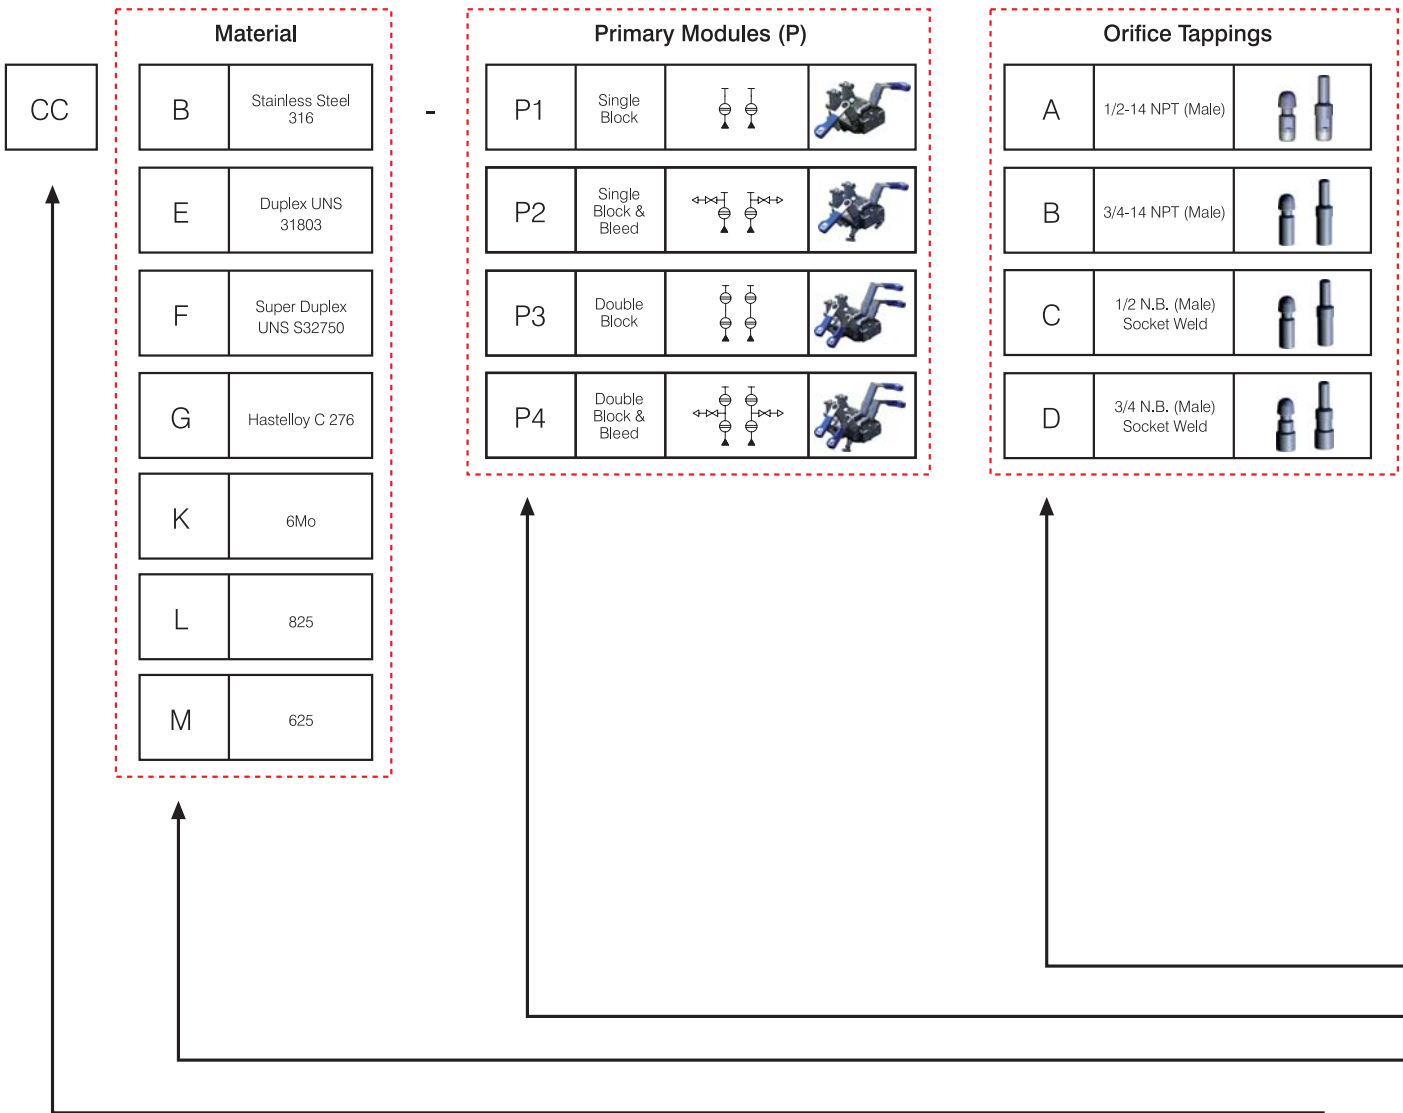











**Example Part Number:** CC B -

**Part Number Description:** Stainless Steel 316 -

**Auxiliary Secondary Modules**

|    |   |  |
|----|---|--|
| AV | 90° Twist Module for vertical installations |  |
| AB | Blanking Plate                              |  |
| AR | 1/2 NPT (Female) Port Connection Module     |  |

**Secondary Modules (S)**

|     |   |  |   |  |   |
|-----|---|--|---|--|---|
| S5R | 5 valve with RPV (6mm) isolate valves.    |   | 1 | Std. Flow Std. Instrument Mounting                 |  |
| S5B | 5 valve with ball (10mm) isolate valves.  |   | 2 | Std. Flow Coplanar Instrument Mounting             |  |
| S5N | 5 valve with needle (6mm) isolate valves. |   | 3 | Custody Transfer Flow Std. Instrument Mounting     |  |
| S3R | 3 valve with RPV (6mm) isolate valves.    |   | 4 | Custody Transfer Flow Coplanar Instrument Mounting |  |
| S3B | 3 valve with ball (10mm) isolate valves.  |   |   |  |   |
| S3N | 3 valve with needle (6mm) isolate valves. |  |   |  |   |

**Options**

|     |                    |    |                                    |
|-----|--------------------|----|------------------------------------|
| A   | Anti Tamper Valves | L  | Lockable Primary Isolates          |
| B   | Blank Plug         | N  | Nace                               |
| F   | Firesafe           | P  | Peek Seated Ball Valves            |
| H   | HCT                | SA | Spanner Actuation Primary Isolates |
| HW  | Handwheel          | 3  | Graphite Packing                   |
| HWL | Locking Handwheel  |    |                                    |

Add option suffix in alpha/numeric order.

Note 1: Anti tamper and needle valve locking handle options will be fitted to vents only, unless specified otherwise.

**P 1 A - S 5 B 1 - N P**





Single Block Primary Module  
1/2 - 14 NPT (Male)  
Orifice Tappings

5 Valve Secondary Module with Ball Valve Isolates. Std Flow Std Instrument mounting \*

NACE compliant. PEEK seated ball valves \*\*

\* if not required enter XXXX

**Seals & Tooling**

|                 |   |   |
|-----------------|---|---|
| CCIMS-ASSY-TOOL | CCIMS assembly tool. One tool supplied with every complete unit.  |  |
| PFS-INSERT-TOOL | PhastFit seal insert tool.  |  |
| PFS-SET-PEEK    | PhastFit seal set. 450G PEEK material. Replace seals every time secondary module is assembled. Pack of 2. |  |
| INST-SEAL-RING  | PTFE instrument sealing rings.  |  |




## Valve Design & Performance Properties

CCIMS incorporates valves from our standard range of Ball, Needle and Rising Plug designs. Full details can be found in the following catalogues:

- Ball Valves 4190-HBV
- Needle Valves 4190-HV
- Rising Plug Valves 4190-HV

### Ball Valve (10mm)

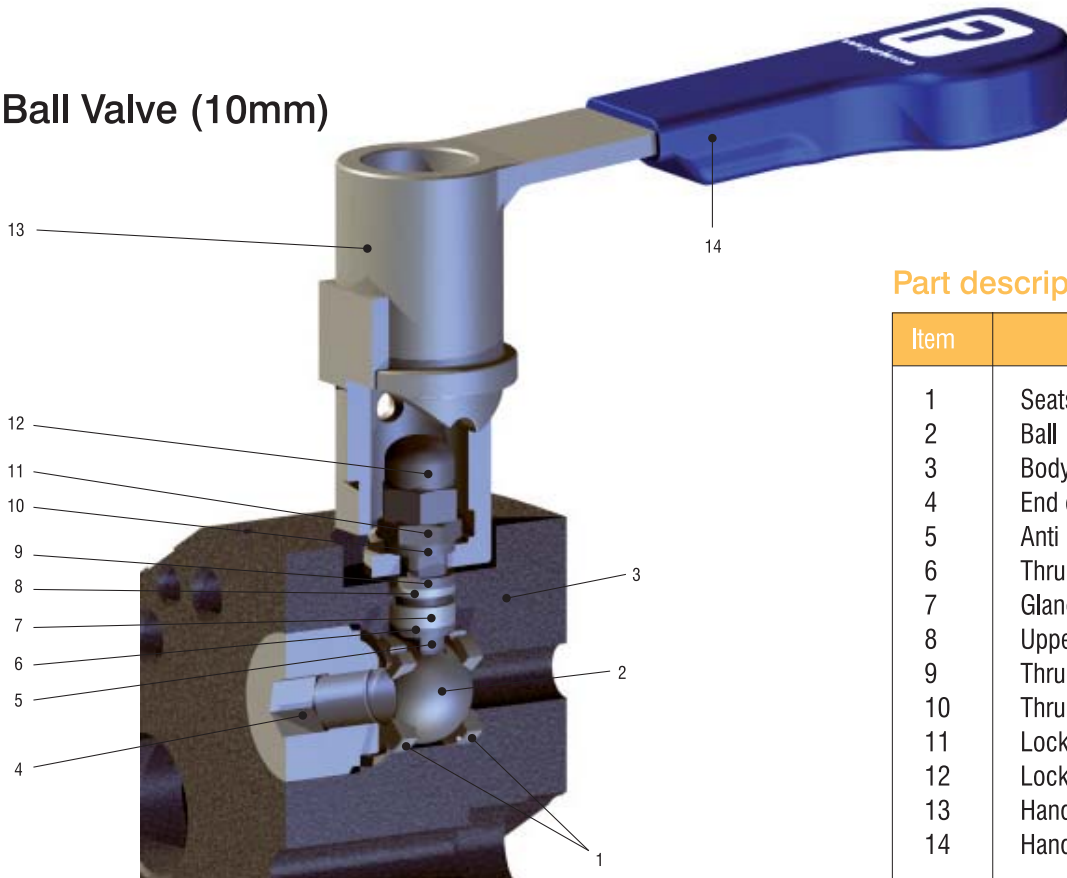


#### Part description


| Item | Description         |
|------|---------------------|
| 1    | Seats               |
| 2    | Ball                |
| 3    | Body                |
| 4    | End connector       |
| 5    | Anti blowout stem   |
| 6    | Thrust seal         |
| 7    | Gland packing       |
| 8    | Upper gland packing |
| 9    | Thrust bush         |
| 10   | Thrust bush         |
| 11   | Lock nut            |
| 12   | Locking dome nut    |
| 13   | Handle (sectioned)  |
| 14   | Handle grip         |

#### Standard Product Specification

Supplied with PTFE seats, 6000psig (414 barg) -20°C to 204°C (4°F to 400°F), PEEK seats 6000psig (414 barg) -20°C to 232°C (4°F to 450°F).

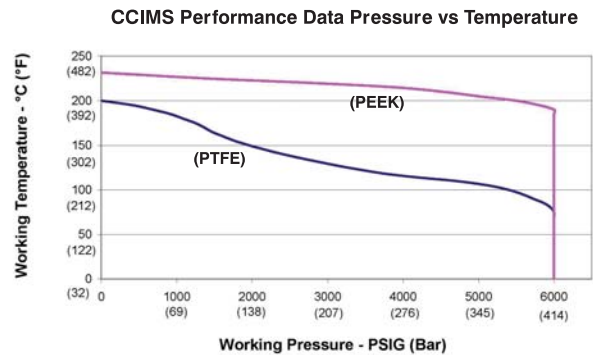

## Rising Plug Valve (RPV) (6mm)

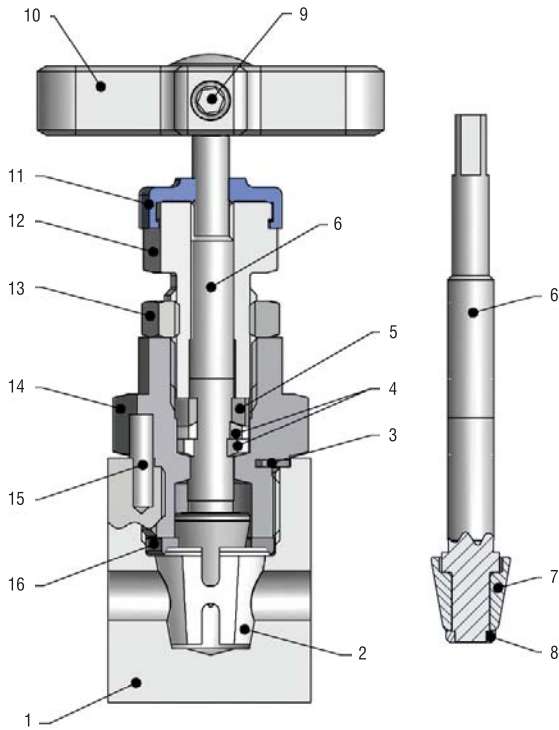


### Standard Product Specification

Supplied with PEEK soft seat, PTFE packed, T bar operation 6000psig (414 barg) max. pressure rating, 232°C max. temperature rating.

### Part description

| Item | Description    |
|------|----------------|
| 1    | Body           |
| 2    | Seat           |
| 3    | Joint seal     |
| 4    | Packing        |
| 5    | Thrust bush    |
| 6    | Stem           |
| 7    | Tip            |
| 8    | Stem cap       |
| 9    | Grub screw     |
| 10   | Handle         |
| 11   | Dust cap       |
| 12   | Gland adjuster |
| 13   | Lock nut       |
| 14   | Bonnet         |
| 15   | Pin            |
| 16   | Seat retainer  |

## Needle Valve (6mm)

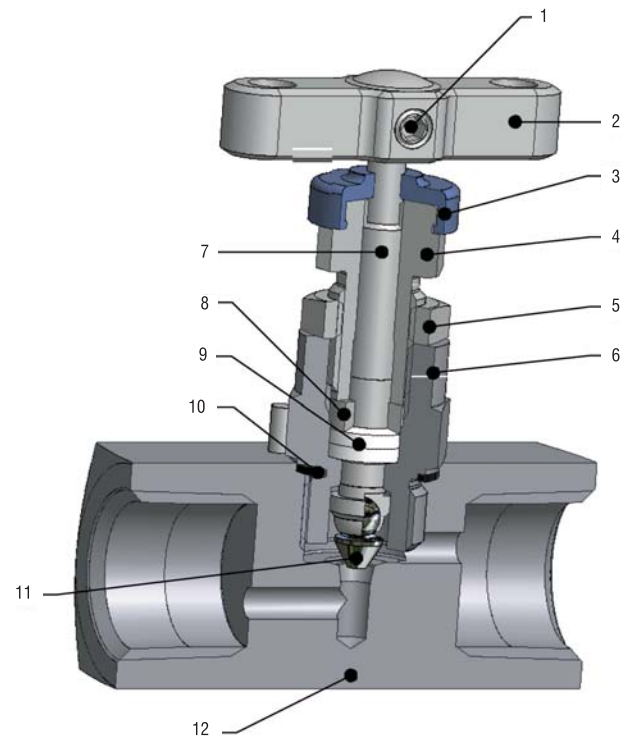

### Standard Product Specification

Metal/metal seated, PTFE packed, stainless steel, T bar operation, globe pattern, 6000psig (414 barg), 232°C max. temperature rating.

### Part description


| Item | Description                |
|------|----------------------------|
| 1    | Positive handle retention  |
| 2    | 'T' bar                    |
| 3    | Dust cap                   |
| 4    | Gland packing adjuster     |
| 5    | Gland adjuster lock nut    |
| 6    | Valve bonnet               |
| 7    | Anti blowout spindle       |
| 8    | Thrust bush                |
| 9    | Gland packing (adjustable) |
| 10   | Excess body washer         |
| 11   | Spindle tip                |

## Basic Installation Guide

CCIMS – The simplest way to complete close coupled instrumentation

**1.**



Attach orifice tappings  
to flanges

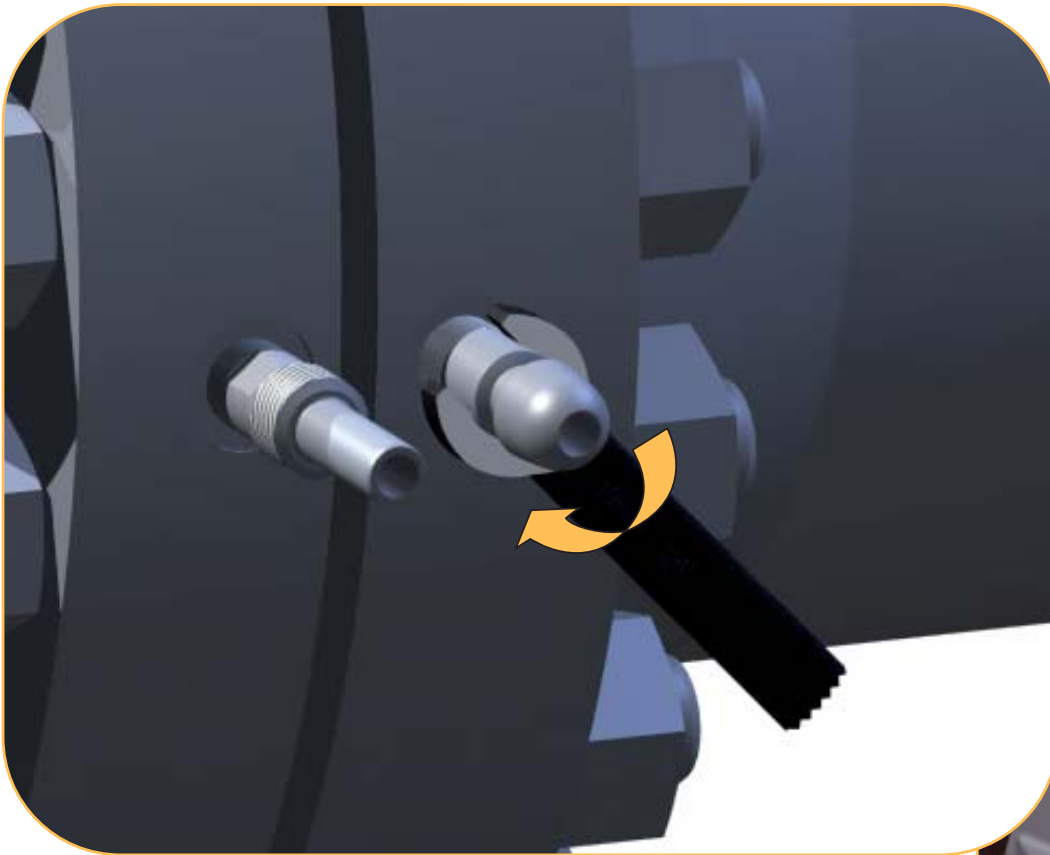

**2.**

Assemble primary  
module to orifice  
tappings



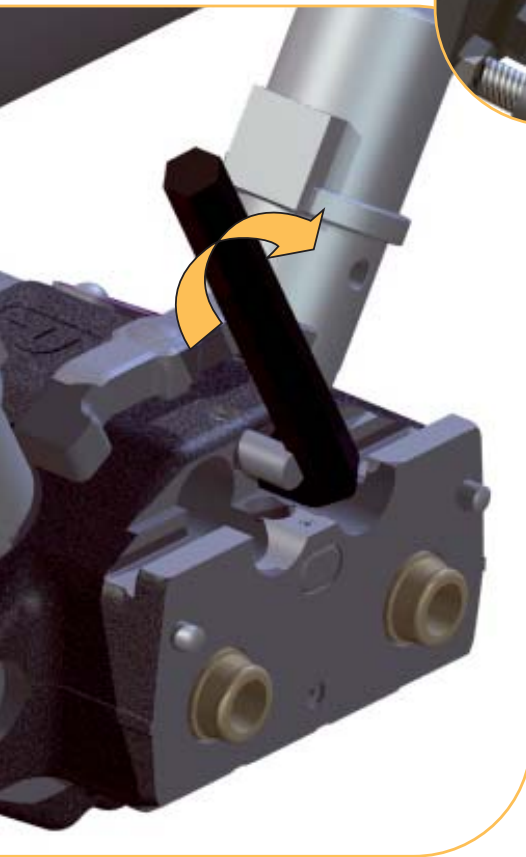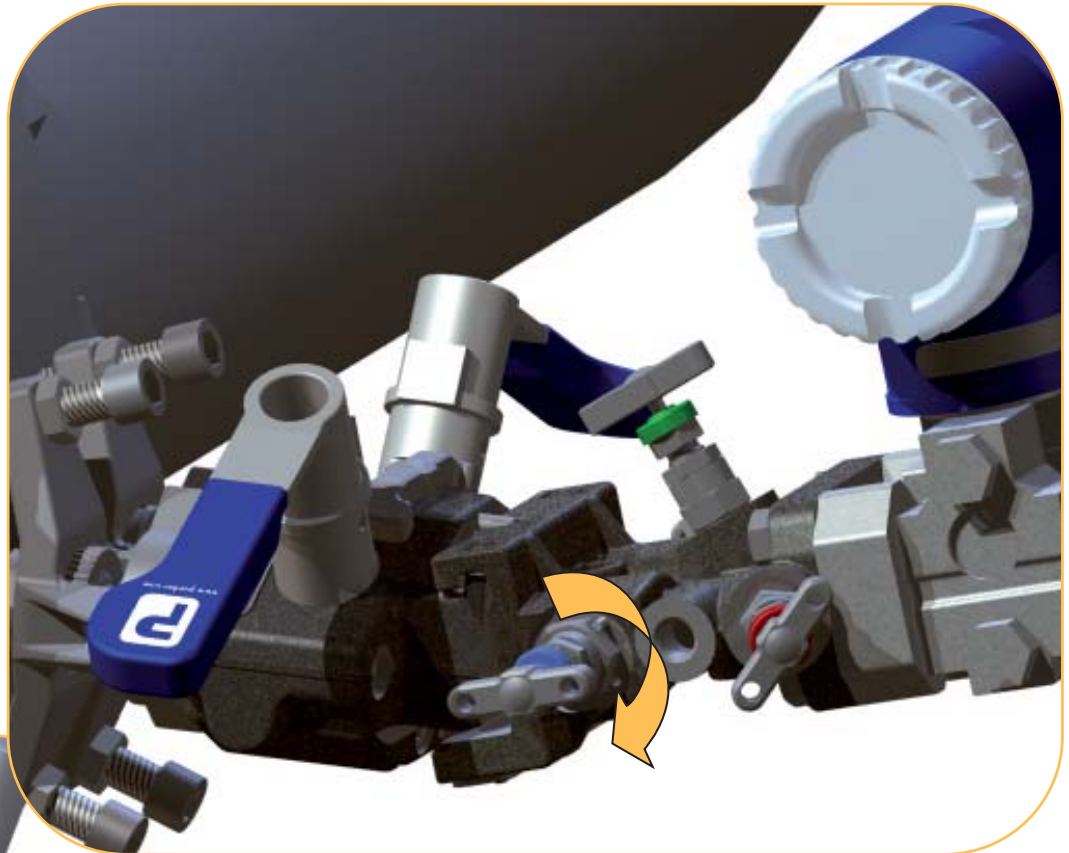

### 3.

Assemble secondary module with attached instrument using innovative PhastFit design

Detailed installation instructions are supplied with every CCIMS unit.



---

**Parker Hannifin Corporation**

Instrumentation Products Division  
1005 A Cleaner Way  
Huntsville, AL 35805  
USA

Tel: (256) 881-2040

Fax: (256) 881-5072

[www.parker.com/ccims](http://www.parker.com/ccims)

**Parker Hannifin Ltd**

Instrumentation Products Division  
Riverside Road  
Pottington Business Park  
Barnstaple, Devon EX31 1NP  
England

Tel: +44 (0) 1271 313131

Fax: +44 (0) 1271 373636

[www.parker.com/ccims](http://www.parker.com/ccims)